New Child Safety Lock Quick Guide

HIGH POINTE

Door Opening Guidance

To Open Microwave During or After Use:

1.Open the door and put in the food that needs to be cooked, then close the door.

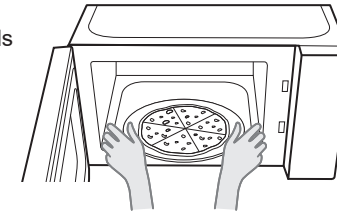

2. Set the desired cooking function to start cooking. The safety lock function works automatically.

3. In the cooking process and open the door within 10 seconds or within 30 minutes after the end of cooking, you need to press " DOOR OPEN " to unlock the safety lock function.

4. Open the door and take out the food.



To Deactivate the Child Safety Lock:

1. Press " 7 350°F ", then " 9 400°F ", then hold "door open" for 3 sec until Uloc appears on the display.

To reactivate, repeat the steps of deactivating.



ATTENTION - New Child Safety Lock

There is a new federal regulation for all countertop microwave ovens to have two distinct actions to open the door. This regulation is to prevent children from the potential of burns when removing hot items. Here are the operating steps for this new 2-step action called the Child Safety Lock.

When the cooking starts, the microwave door automatically locks.