WONDER | REAR LOUNGE

2022 MANUAL



LEISURE
TRAVEL VANS

⚠ WARNING

Operating, servicing and maintaining a passenger vehicle, pickup truck, van, or off-highway motor vehicle can expose you to chemicals including engine exhaust, carbon monoxide, phthalates, and lead, which are known to the State of California to cause cancer and birth defects or other reproductive harm. To minimize exposure, avoid breathing exhaust, do not idle the engine except as necessary, service your vehicle in a well-ventilated area and wear gloves or wash your hands frequently when servicing your vehicle.
For more information go to www.P65Warnings.ca.gov/passenger-vehicle

TABLE OF CONTENTS

1. INTRODUCTION
- Supplemental Manual....1-1
- Motorhome Information Kit....1-2
- Options and Equipment....1-2
- Service Assistance....1-2
- Reporting Safety Defects....1-3

2. GENERAL INFORMATION
- Floor Plan....2-1
- Exterior Equipment Location....2-2
- Beds and Seating....2-4
  - Lowering the Murphy Bed....2-4
  - Raising the Murphy Bed....2-4
- TV Location....2-5

3. FIREFLY MULTIPLEX SYSTEM
- Home Screen....3-1
- Lights Screen....3-2
- Auto Gen Start Settings Screen....3-2
  - Triggers....3-2
  - Settings....3-3
- Climate Screen....3-3
- Settings Screen....3-4
- Switch Panels....3-4
- Troubleshooting....3-5

4. SCHEMATICS
- Electrical....4-1
  - 12 volt Electrical Reference....4-1
  - 120 Volt Electrical Reference....4-2
  - Electrical Schematic....4-3
- Plumbing....4-8
  - Water lines schematic....4-8
  - Drain line schematic....4-9
- Entertainment....4-10
- Satellite Pre-wire....4-11

1. INTRODUCTION

Congratulations! Thank you for selecting a Leisure Travel Vans Motorhome.

Welcome to the exciting world of motorhome travel and camping, with all the comforts of home with you, while you travel and enjoy the outdoors.

Your motorhome has been designed and manufactured to enhance your travel and camping experience and to provide you with safe, efficient and trouble-free operation.

Before your first drive, become familiar with the operation of the vehicle chassis and all functions and operations of the motorhome. Spend adequate time with your dealer when you take delivery to learn all you can about your new motorhome.

KEEP the Motorhome Information Kit within your motorhome for readily available reference.

PASS this manual, the Chassis Operation Manual and the Motorhome Information Kit to any subsequent operator or owner.

For clarification or further details on any of the enclosed information, please contact:

Your Leisure Travel Vans Dealer or Triple E RV Customer Service at:

Email:	info@tripleerv.com
Toll Free:	877-992-9906
Telephone:	204-325-4361
Fax:	204-325-5241

SUPPLEMENTAL MANUAL

This manual was prepared to aid the operator and occupants in the operation and care of the motorhome by giving specific information about your model. There are many options to Leisure Travel Vans, so ensure that you are familiar with your motorhome's systems and equipment. All operators and occupants of the motorhome should read, understand and follow the instructions in this manual, the vehicle chassis manual & the information contained in the Motorhome Information Kit provided with your new motorhome.

Your motorhome contains a number of systems, components, equipment, and appliances manufactured by vendors that supply components for Triple E RV. These vendors are unrelated to Triple E RV.

Before operating the motorhome for the first time – even if an experienced motorhome operator – read and become familiar with all of the relevant manuals to your motorhome, components, equipment and appliances provided in the Motorhome Information Kit. Your familiarity with the detailed operation of your motorhome will assist in your safe, efficient and trouble-free motorhome operation.

MOTORHOME INFORMATION KIT

The Motorhome Information Kit includes but isn't limited to information on the components, equipment and appliances listed below (based on options selected).

- Refrigerator
- Stove top
- Furnace
- Electrical Panel
- Toilet
- Water Heater
- Water Pump
- Water Filtration
- Vent (roof)
- Fire Extinguisher
- Smoke Detector
- Thermostat
- CO Detector
- Propane Detector
- Gas Regulator
- TV Antenna
- TV/DVD
- Chassis
- Air Conditioner
- Generator
- Stabilizers/Leveling Jacks
- Rear View Monitor
- Inverter
- Entertainment System
- Safety
- Flooring and Countertops
- Electric Step
- Solar Panel
- Surge Protector
- Safe
- Awning

OPTIONS AND EQUIPMENT

Leisure Travel Vans are available in various sizes and floor plan configurations and with differing optional equipment. The equipment, accessories and components described in this manual may not apply in all respects to your motorhome. Read the material and manuals provided in the Motorhome Information Kit for detailed instructions regarding the equipment specific to your motorhome.

SERVICE ASSISTANCE

Your dealer will assist you with any additional information you need and will answer any questions you have about the operation of your motorhome. When it's time to service the vehicle, remember that your dealer knows your motorhome best and is dedicated to your satisfaction. Your dealer will provide quality maintenance and assistance during your period ownership. Triple E RV strongly recommends that you follow a regular maintenance schedule to keep your motorhome functioning at its best.

Call the following numbers if you require warranty assistance while traveling:

Triple E RV: 1-877-992-9906

Canada Sprinter Customer Service:
1-800-387-0100 www.thesprinter.ca

US Sprinter Customer Service:
1-877-762-8267 www.mbsprinterusa.com

Canada Ford Customer Service:
1-800-565-3673 www.ford.ca

US Ford Customer Service:
1-800-392-3673 www.ford.com

Emergency Roadside Service* Call:
1-877-219-3831
4287 Beltline Road, Box 198
Addison, Texas 75001

*This Emergency Roadside Service is available to owner of the motorhome during the first two years after purchase.

REPORTING SAFETY DEFECTS

If you suspect your motorhome has a safety defect that could cause injury or death, immediately contact Triple E RV. Also, contact the National Highway Traffic Safety Administration (NHTSA) in the US or Transport Canada to report your concern.

NHTSA will investigate the concern if there are a number of similar complaints. NHTSA has the authority to order a recall and repair campaign depending on the nature and severity of the problem.

You can reach the NHTSA by calling the Auto Safety Hot-line at 1-800-424-9393 (202-366-0123 in the Washington, DC, area) or by writing to NHTSA, US Department of Transportation, Washington, DC 20590. The hot-line also will provide you with additional information on motor vehicle safety.

In Canada, call 1-613-993-9851 or write to Transport Canada and Road Safety, 2780 Sheffield Road, Ottawa, Ontario K1B 3V9.

2. GENERAL INFORMATION

FLOOR PLAN

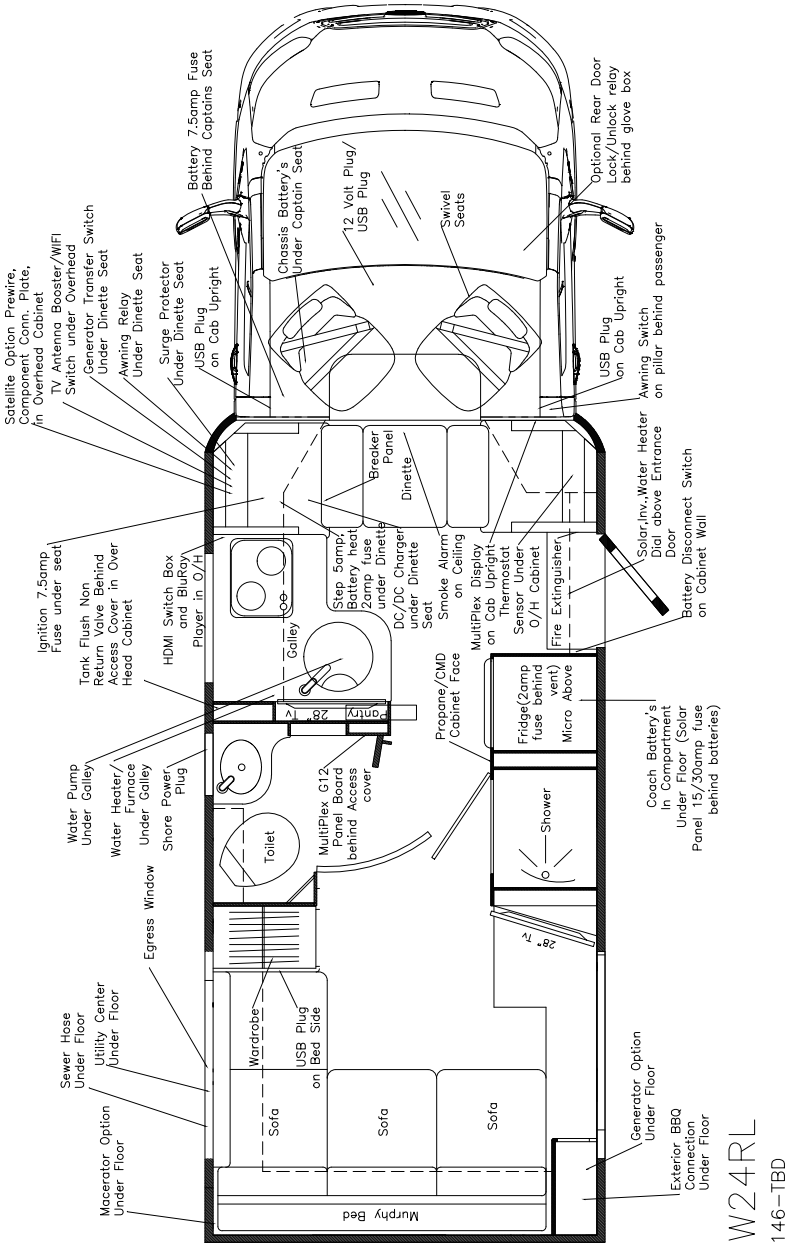

EXTERIOR EQUIPMENT LOCATION

PASSENGER SIDE VIEW

1. Light
2. External Receptacle
3. Generator Compartment
4. BBQ Hook-Up
5. Storage Compartment
6. Electrical Step
7. Awning
8. Ladder (Optional)
9. Fridge Vents
10. Inverter/Battery Compartment

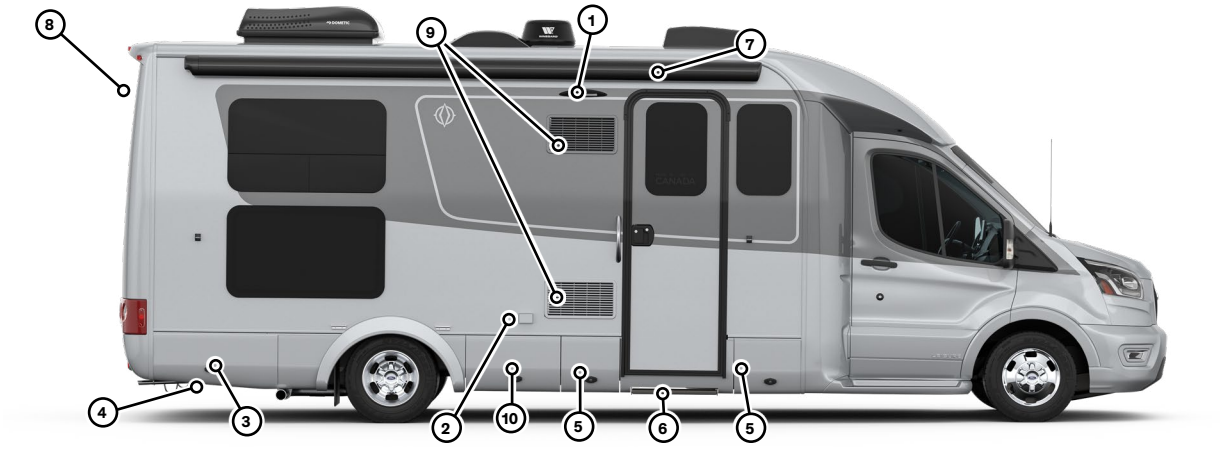

DRIVER SIDE VIEW

1. Sewer Termination
2. Fuel Fill
3. Sewer Hose (Behind Doors)
4. Shore Power Connection
5. Utility Center
6. Storage Compartment
7. Propane Shut-Off
8. Water Heater
9. Furnace Vent

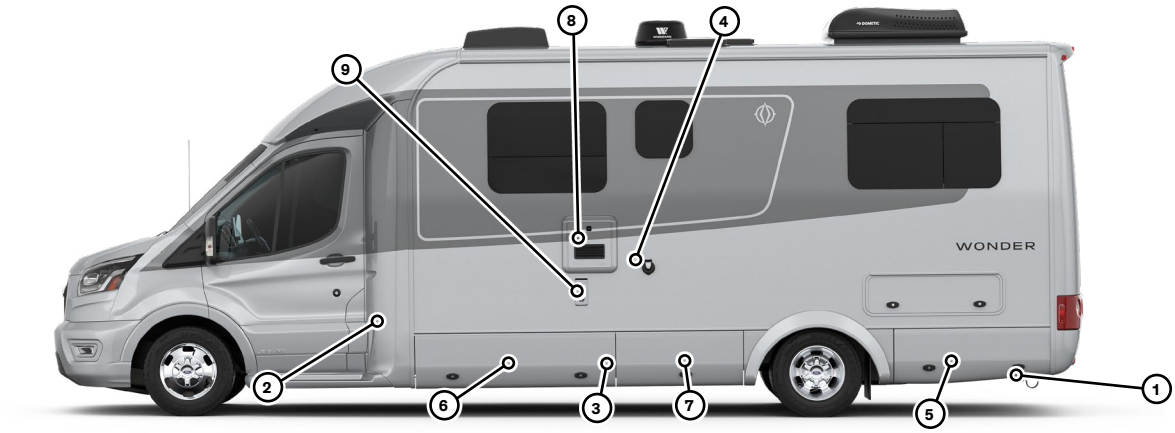

TOP VIEW

1. Skylight
2. Stack Vent
3. Roof Vent
4. Satellite (Optional)
5. Solar Panels (Optional)
6. A/C
7. Radio Antenna
8. TV/WiFi Antenna
9. Awning

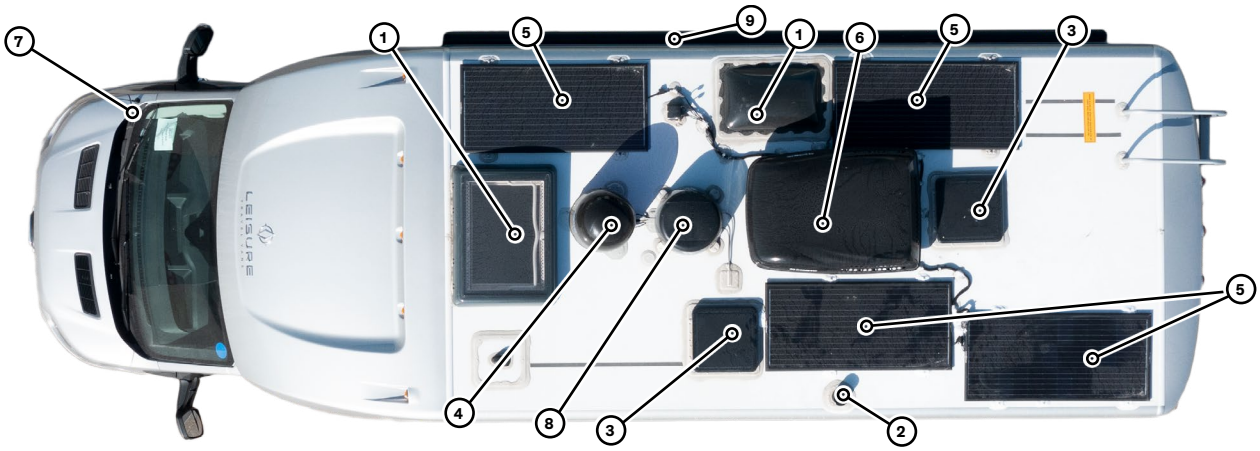

BEDS AND SEATING

LOWERING THE MURPHY BED

1. Remove the back rests and seat cushions (10) and set aside.

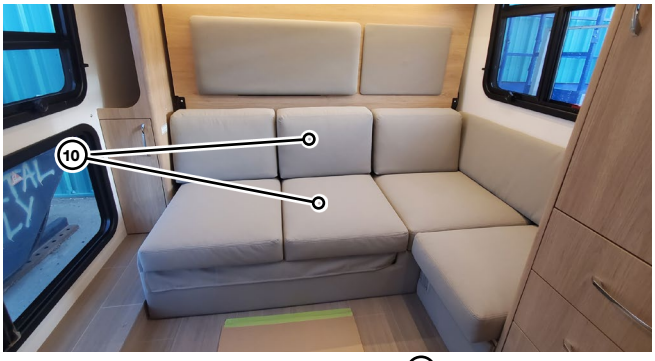

2. Raise the padded head rest (11) until it click in to place.

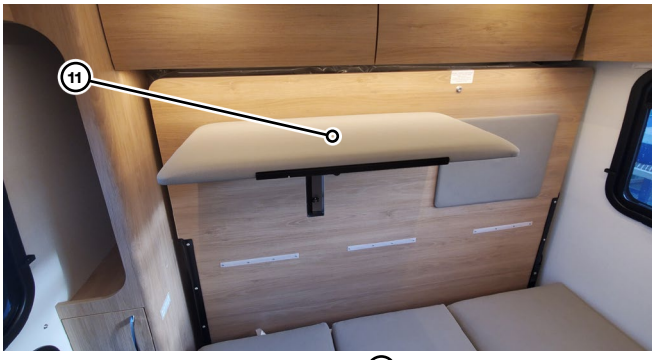

3. Disengage the travel lock (12) located on the driver side of the bed by raising the arm up.

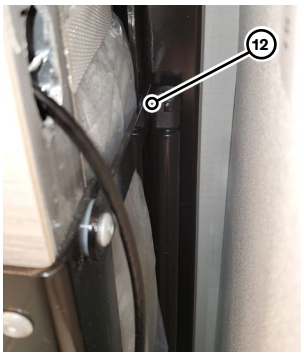

4. Carefully lower the bed until it is resting on the floor, and the locking mechanism is engaged.

⚠ WARNING

Always ensure that the bed is locked when in the lower position. Failure to do so could allow the bed to close while occupied, causing serious injury or death.

RAISING THE MURPHY BED

1. Press the lock release button (13) under the bed and lift the bed.



2. Engage the side locking mechanism (12) once the bed is upright.

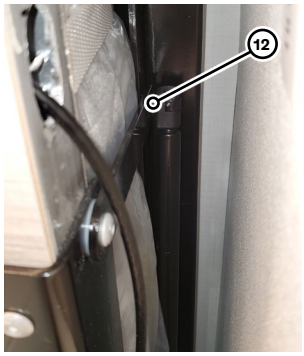

⚠ CAUTION

Always ensure that the bed is locked when in the upright position. Failing to do so will allow the bed to fall, causing damage or personal harm.

3. Lower the padded headrest by pushing up in the center of the support (14), and lowering the headrest.

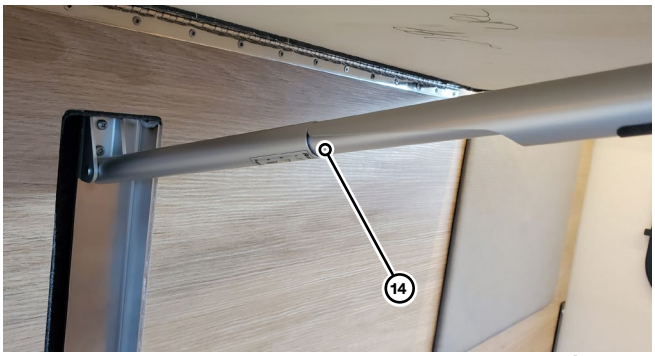

4. Replace the seat cushion and back rests (10).

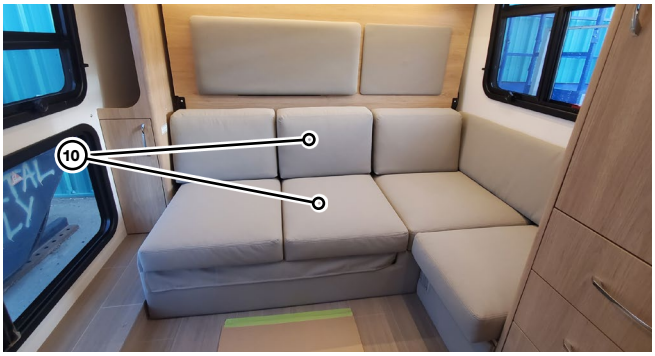

TV LOCATION

The Wonder RL TV is located in the rear lounge section of the coach (15), as well as the wall next to the galley (16).





3. FIREFLY MULTIPLEX SYSTEM

HOME SCREEN

The multiplex Home screen gives a basic control and information on many of the installed components. To activate the home screen, simply tap on the Home icon ① in the left navigation.



LIGHTING ②

Lighting buttons will turn Blue while a circuit is on and Black/White once the circuit has been turned off. This color change is known as “showing feedback.”
The Light Master controls all interior lights at once. When Light Master Off is pressed, it will remember which lights were on. Then, when Light Master On is pressed, it will only turn on the lights that are in memory.
NOTE: To turn on all lights again, press and hold Light Master On for at least one second.

⚠ NOTICE

Memory is rewritten each time Light Master Off is pressed. In the case that it is pressed twice in a row, it will remember that no lights were on and just touching Light Master On won’t turn on any lights. Press and hold Light Master On to turn the lights back on. Note: Light Master On/Off buttons will always appear blue and will not show feedback at any time.

CLIMATE CONTROL ③

The Home screen also gives you basic information and control of the climate control. It will display the current climate control mode, the current temperature, and allow you to adjust the internal temperature by touching the up and down arrows.

TANK INFORMATION ④

The Home screen will show the current fill level of the fresh water, gray, and black tank, as well as the remaining level of the LP tank.

WATER PUMP ⑤

Tap the water pump button to toggle the water pump on/off. The Water Pump icon will be bright blue if the pump is on.

BATTERY LEVEL INDICATORS ⑥

These graphics will indicate the battery voltage for the House and Chassis batteries. The graphics will display Green while above 12V and Red while below 12V.

GENERATOR CONTROLS ⑦

The Generator display will show the total number of generator hours accumulated as well as the current operating status (running or stopped). Generator hours are saved to the system, not to the generator itself.

- **Gen Start:** Press and Hold to start the generator. Please note that the generator requires a press and hold because it operates on a one-second delay as a safety feature to help prevent accidental generator starts.
- **Gen Stop:** Press and hold to stop the generator.

SATELLITE POWER (OPTIONAL) ⑧

If you have the optional Winegard satellite installed, you will find an icon that will allow you to turn the power for the satellite on and off.
NOTE: If you do not have the satellite option installed, this icon will not be displayed.

LIGHTS SCREEN

This screen will control the lighting for the entire coach, including the exterior, as well as adjust the intensity of dimmable lights in the coach. To activate the Lights screen, simply tap on the Lights icon ① in the left navigation.



To turn individual lights On and Off, simply tap the desired lighting icon once. If the light icon has an ▲▼ icon, that light is dimmable. To dim the light, just press and hold the button and the light will begin to cycle the brightness up and down. Release the button when the desired lighting is achieved.

AUTO GEN START SETTINGS SCREEN

The Firefly multiplex system is equipped with an AGS (Auto Gen Start) system that will automatically attempt to start the generator. To activate the Auto Gen Start screen, simply tap on the Auto Gen Start icon ② in the left navigation.

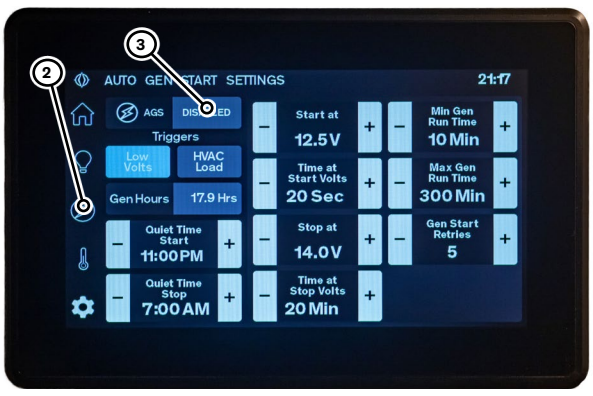

To enable AGS, tap on the Enable/Disable toggle button ③. You will have to confirm you want the AGS turned on by following the screen prompts.

⚠ WARNING

Enabling AGS in an enclosed or unventilated space may cause injury or death.

Do not enable AGS without ensuring it is safe to do so.

TRIGGERS

In order for the AGS to run, it needs a trigger to tell it when to start. This can be either low battery voltage, the air conditioner/heat pump, or both. If no triggers are selected, the AGS will not run.



LOW VOLTS ④

This trigger will cause the generator to start when the coach batteries fall below a set voltage. To enable the low volt trigger, ensure AGS is enabled, and tap the Low Volts button.

HVAC LOAD ⑤

The HVAC trigger will cause the generator to start with the air conditioner or heat pump.

⚠ WARNING

Do not use this trigger if plugged into shore power.

SETTINGS

- **Quiet Time Start/Stop** ⑥**:** Between these hours, the AGS will not attempt to automatically start the generator.
- **Start at** ⑦**:** The AGS will start the generator when the motorhome's batteries reach this voltage.
- **Time at Start Volts** ⑧**:** The amount of time for the batteries to stay at the set start voltage before the generator attempts to start.
- **Stop at** ⑨**:** The battery voltage at which the AGS will turn off the generator.
- **Time at Stop Volts** ⑩**:** The amount of time for the batteries to stay at the set stop voltage before the generator stops.
- **Min Gen Run Time** ⑪**:** The minimum amount of time for the generator to run once started.
- **Max Gen Run Time** ⑫**:** The maximum amount of time for the generator to run once started.
- **Gen Start Retries** ⑬**:** The amount of times the AGS will attempt to start the generator if the first attempt does not succeed.

CLIMATE SCREEN

Here you will find the settings for the climate control of your motorhome. To activate the Climate screen, simply tap on the Climate icon ⑭ in the left navigation.



Use the arrow keys ⑮ to select your desired temperature, and set the climate control type to either cool, heat pump, furnace, or auto.

- **Cool** ⑯**:** Tap to operate the air conditioning. The A/C will run until the current temp reaches your desired temp and then shut off.
- **Heat Pump** ⑰**:** Tap to operate the Heat Pump. The Heat Pump will run until the current temp reaches your desired temp and then shut off.
- **Furnace** ⑱**:** Tap to operate the Furnace. The Furnace will run until the current temp reaches your desired temp and then shut off.
- **Auto** ⑲**:** Tap to put the system into Auto mode. The A/C or Heat Pump will automatically run to keep your desired temperature consistent.

NOTE: The furnace will not run automatically in auto mode.

To adjust the fan speed ⑳, simply tap on the mode you would like. The fan will operate by choosing High or Low. Auto will turn the fan off. Fan Only Mode is only available if HVAC is off.

SETTINGS SCREEN

The Settings screen contains the general settings for the multiplex system. To activate the Settings screen, tap on the Settings icon in the left navigation.

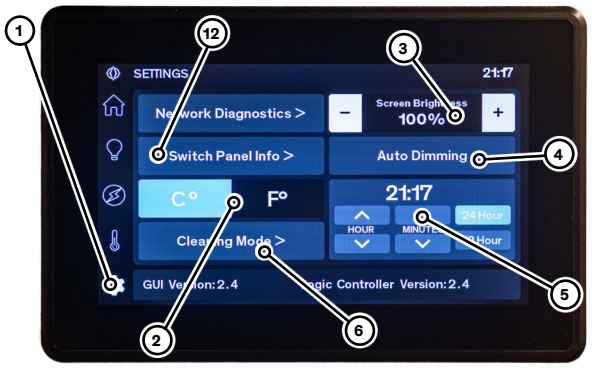

CHANGING TEMPERATURE UNITS

To change between Fahrenheit and Celsius for the climate control, tap on either C or F to set the preferred units.

SCREEN BRIGHTNESS

Use the +/- buttons to select between 10 levels of screen brightness or screen sleep mode. Tapping the screen after it has been asleep will bring it back to previous brightness.

AUTO DIMMING

When enabled, the screen will enter sleep mode after 60 seconds of inactivity. Tap anywhere on the screen to wake it up.

SETTING THE TIME

Use the up and down arrows to adjust the hours and minutes. Select 24-hour time mode or adjust Hour/Minutes.

CLEANING MODE

Tap to put your screen to sleep for 15 seconds for the purpose of cleaning.

SWITCH PANELS

You will find wirelessly connected switch panels (7) with backlit keys throughout the motorhome to control lights remotely.

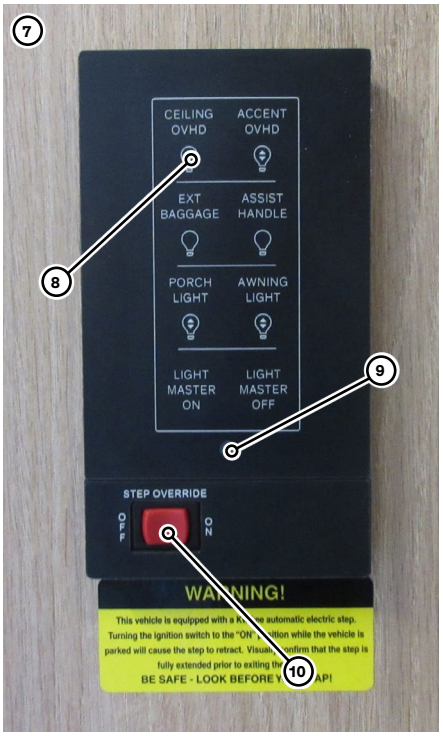

Lights that are dimmable (8) will have Up/Down arrows next to the icon. Press and hold these buttons to ramp the brightness up and down. Each time that a button is pressed, the Operational LED (9) will illuminate green to indicate that the command has been sent to the touchscreen.

The switch nearest the coach entrance also contains the Step Override switch (10). Turn the Step Override on to prevent the steps from retracting when the coach door is closed.

NOTE: The vehicle ignition switch must be in the “OFF” position for the step override switch to work.

TROUBLESHOOTING

If you press a switch panel button and the operational LED does not illuminate, you'll need to change the battery. Simply use your fingers to pry the switch panel away from the wall-mounted backplate to access the battery compartment on the back of the switch. These switches are powered by a 2032 coin cell battery (11).



Once you replace the battery, line the switch panel up with the backplate and apply pressure to snap the switch panel back into place.

If the switch panel operational LED lights up but the lights do not toggle, you may have to re-pair the switch to the control panel.

1. From the Settings screen, tap on Switch Panel Info (12).
2. Tap on the icon for the switch that is not working and hold for 3 seconds.
3. Tap on "Start Pairing" to begin the pairing process.
4. The control panel will begin counting down from 30 seconds. Before the timer runs out, press and hold 2 buttons on the switch to be paired for 5 seconds.

The control panel should display the pairing was a success. If it does not, make sure the Operational LED is lighting up when a button is pressed, and replace the battery if necessary.

4. SCHEMATICS

ELECTRICAL

12 VOLT ELECTRICAL REFERENCE

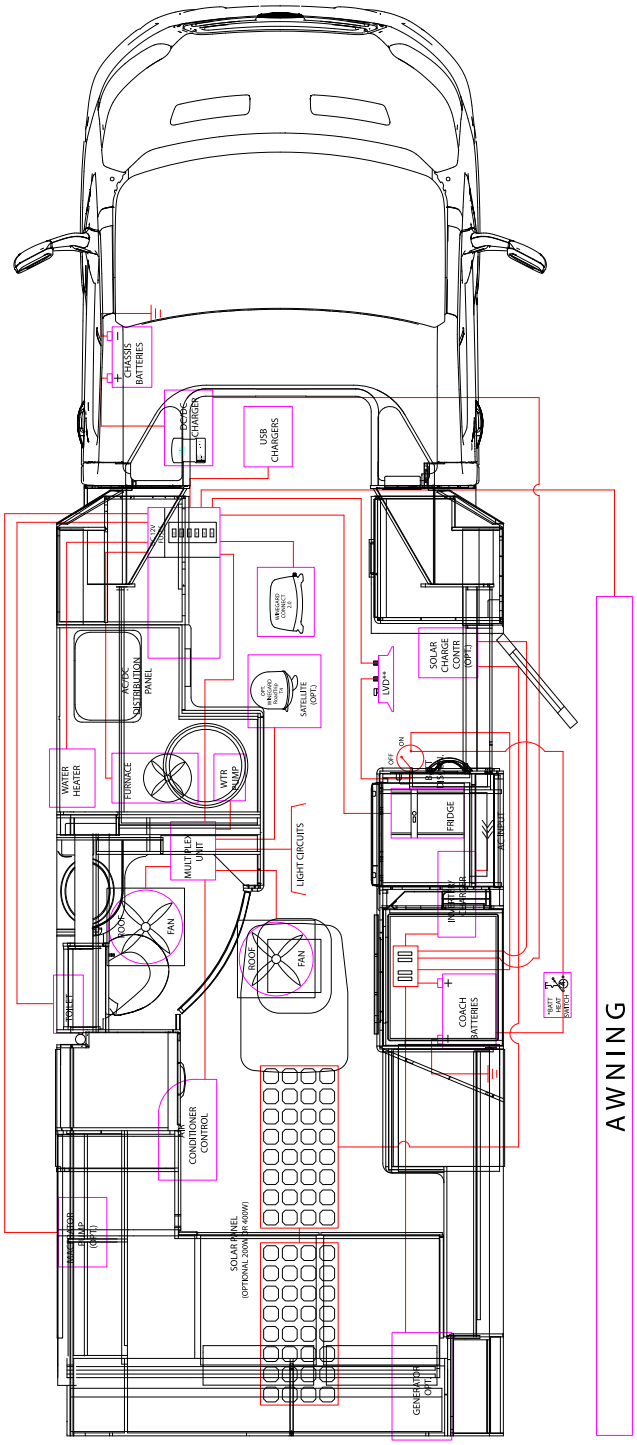

W24RL 12V ELECTRICAL WIRING SCHEMATIC

PLEASE REFER TO BREAKER PANEL LABELS FOR EXACT LAYOUT

*BATTERY HEAT SWITCH ONLY AVAILABLE WITH LITHIUM BATTERIES
**LVD ONLY REQUIRED WITH AGM BATTERIES

120 VOLT ELECTRICAL REFERENCE

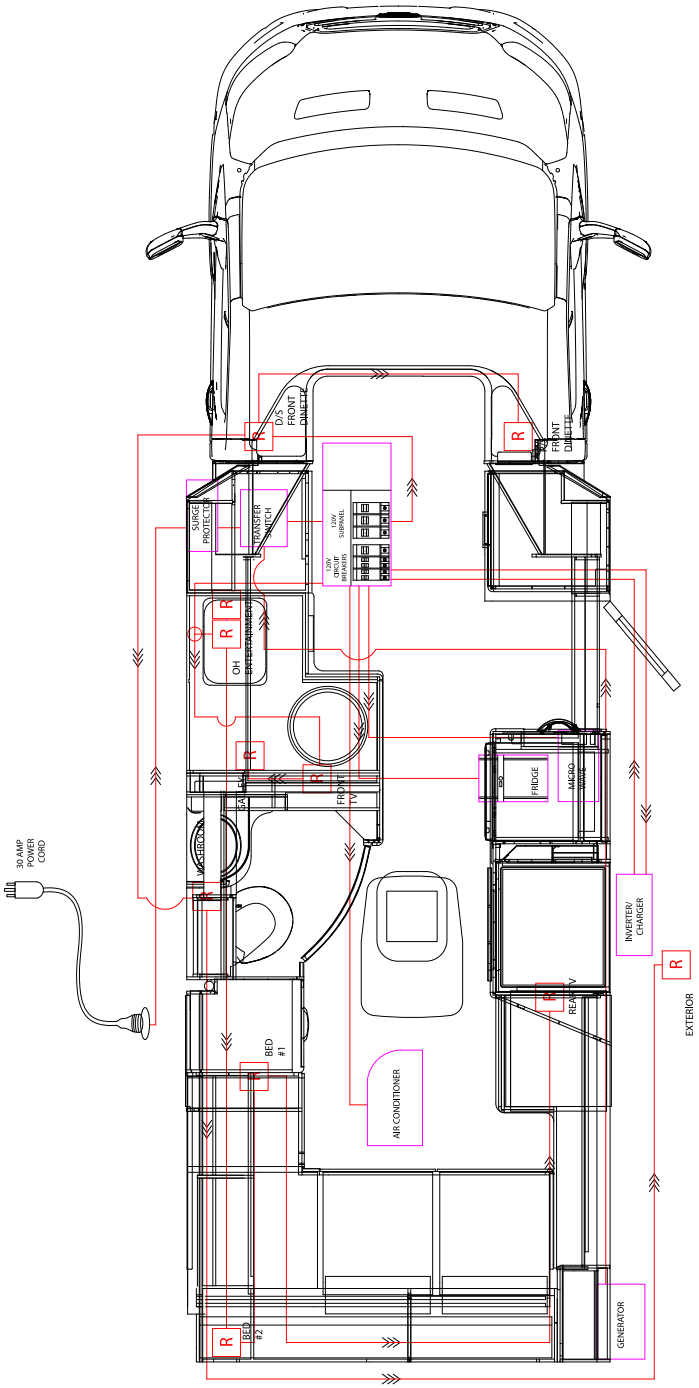

W24RL 30 AMP 120V ELECTRICAL WIRING SCHEMATIC

PLEASE REFER TO BREAKER PANEL LABELS FOR EXACT LAYOUT

ELECTRICAL SCHEMATIC

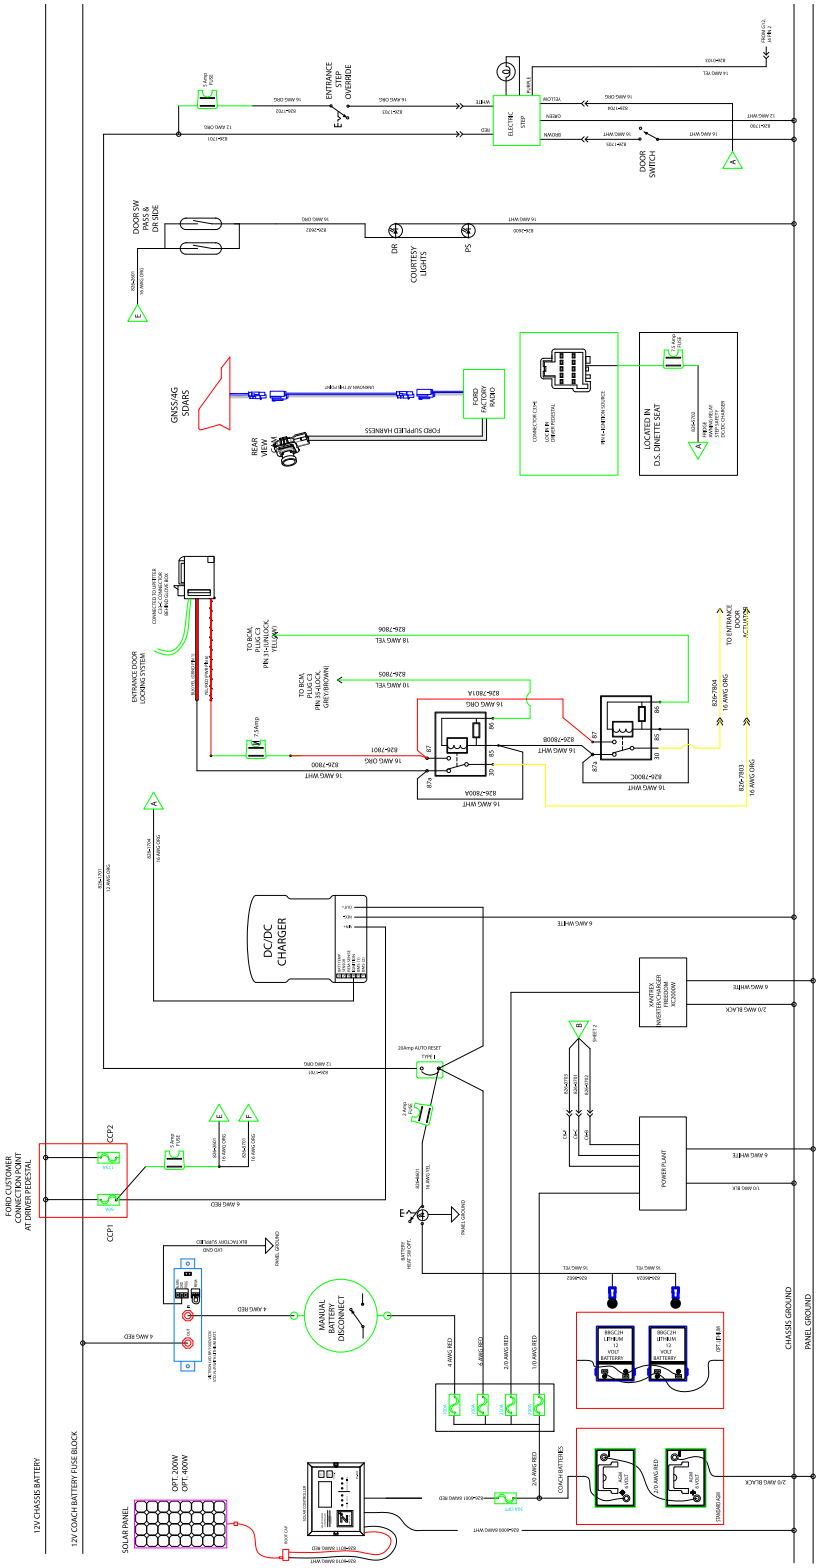

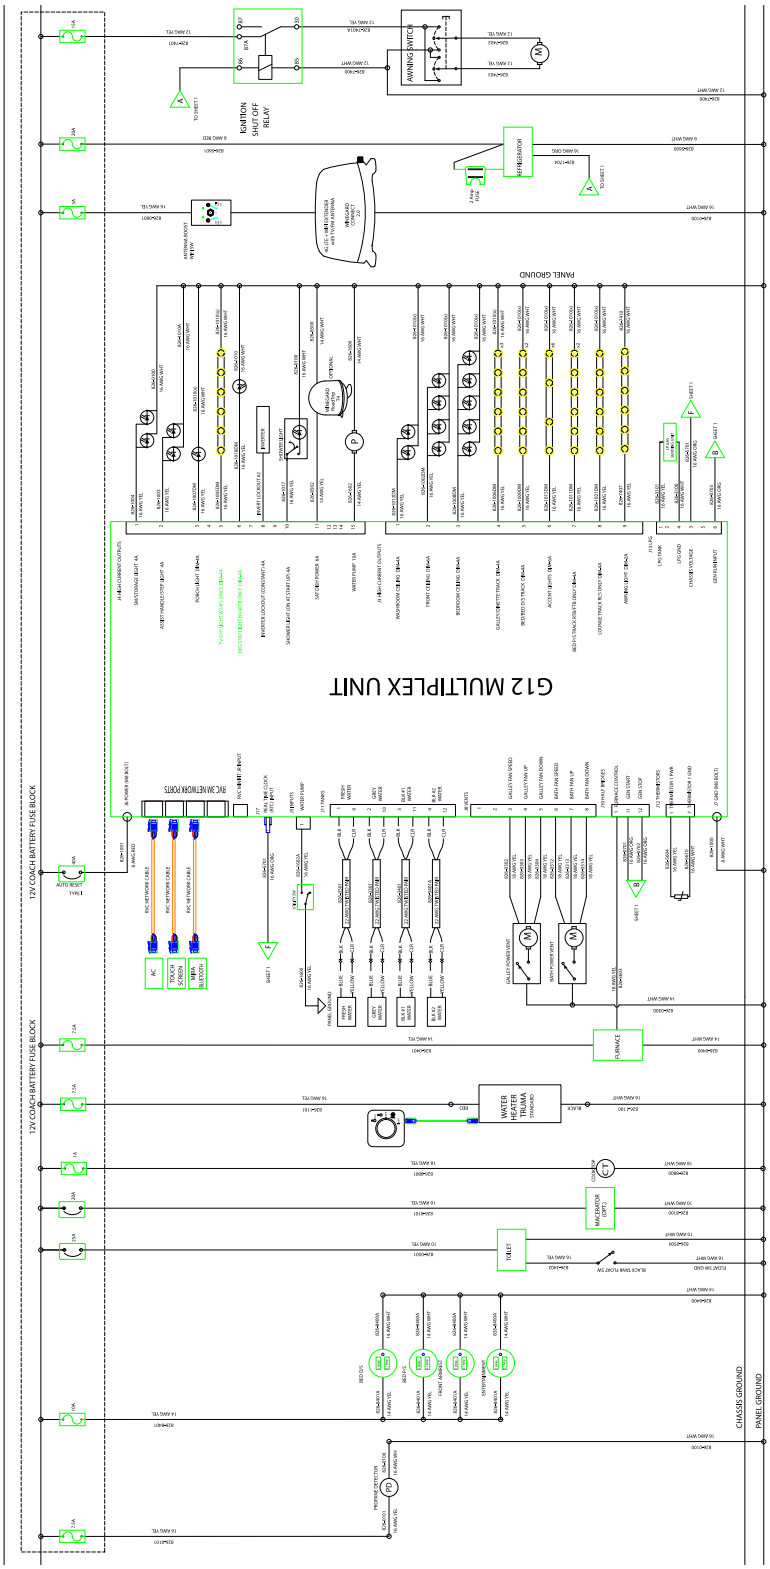
12V CHASSIS BATTERY
12V COACH BATTERY FUSE BLOCK
IGNITION SAFETY CUT-OFF RELAY
AWNING SWITCH
REFRIGERATOR
PANEL GROUND
G12 MULTIPLEX UNIT
RVC NETWORK PORTS
WATER HEATER TRUMA
TOILET
MACERATOR PUMP
CHASSIS GROUND
PANEL GROUND

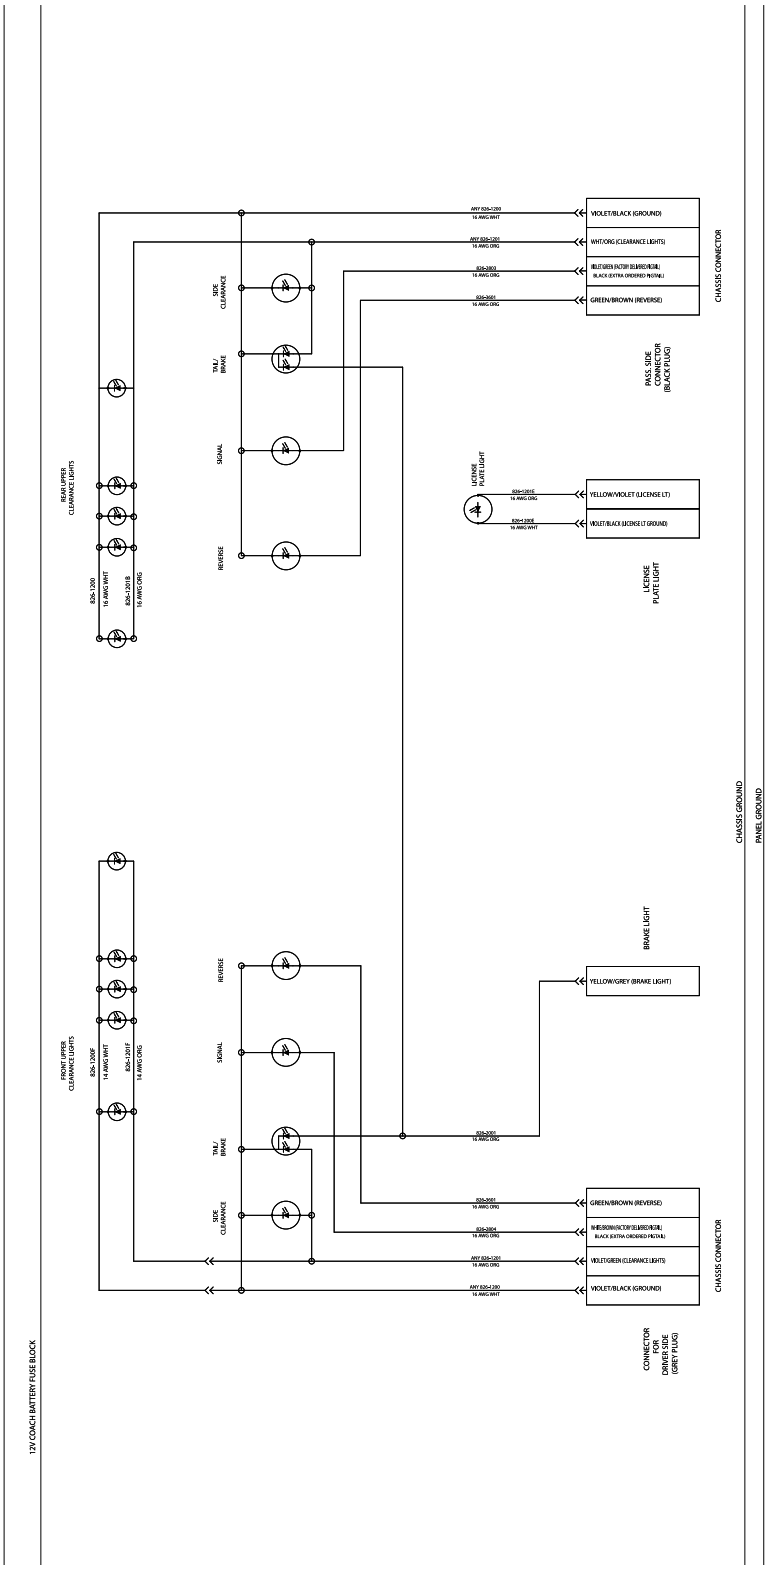
12V CHASSIS BATTERY
12V COACH BATTERY FUSE BLOCK
REAR UPPER CLEARANCE LIGHTS
FRONT UPPER CLEARANCE LIGHTS
SIDE CLEARANCE
TAIL/ BRAKE
SIGNAL
REVERSE
VIOLET/BLACK (GROUND)
WHT/ORG (CLEARANCE LIGHTS)
GREEN/BROWN (REVERSE)
CHASSIS CONNECTOR
PASS. SIDE CONNECTOR (BLACK PLUG)
LICENSE PLATE LIGHT
YELLOW/VIOLET (LICENSE LT)
VIOLET/BLACK (LICENSE LT GROUND)
BRAKE LIGHT
YELLOW/GREY (BRAKE LIGHT)
CONNECTOR FOR DRIVER SIDE (GREY PLUG)
CHASSIS GROUND
PANEL GROUND

STANDARD AGM BATTERY LAYOUT

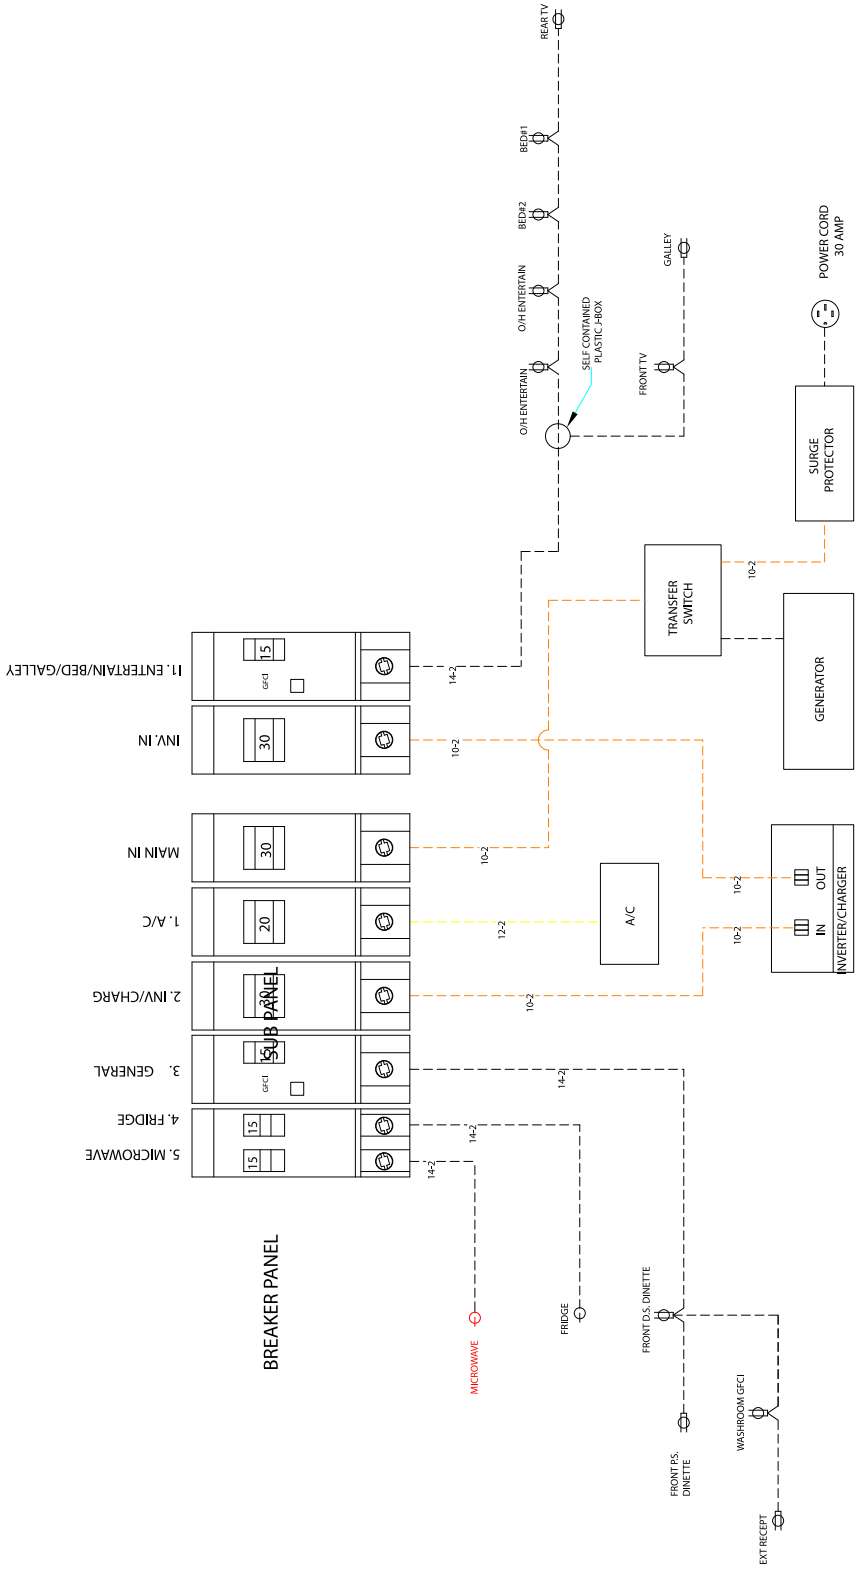

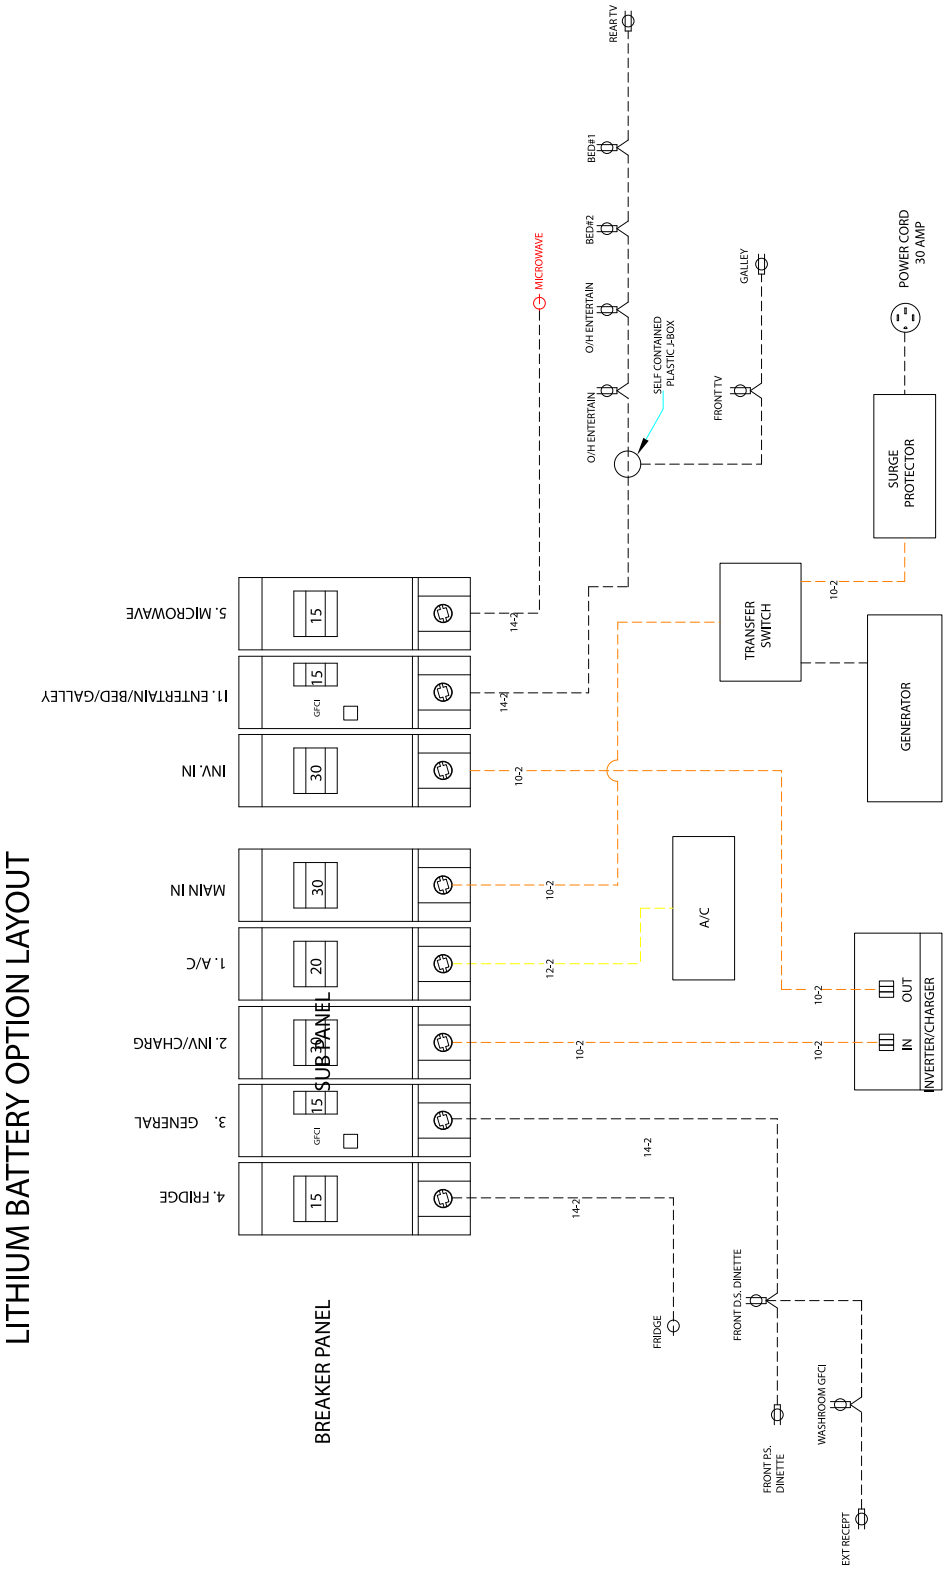
LITHIUM BATTERY OPTION LAYOUT
BREAKER PANEL
SUB PANEL
5. MICROWAVE
11. ENTERTAIN/BED/GALLEY
INV. IN
MAIN IN
1. A/C
2. INV/CHARG
3. GENERAL
4. FRIDGE
15
20
30
GFCI
MICROWAVE
REAR TV
BED#1
BED#2
O/H ENTERTAIN
O/H ENTERTAIN
SELF CONTAINED PLASTIC J-BOX
FRONT TV
GALLEY
POWER CORD 30 AMP
SURGE PROTECTOR
TRANSFER SWITCH
GENERATOR
A/C
INVERTER/CHARGER
IN
OUT
FRIDGE
FRONT D.S. DINETTE
WASHROOM GFCI
FRONT P.S. DINETTE
EXT RECEPT
14-2
10-2
12-2

PLUMBING

WATER LINES SCHEMATIC

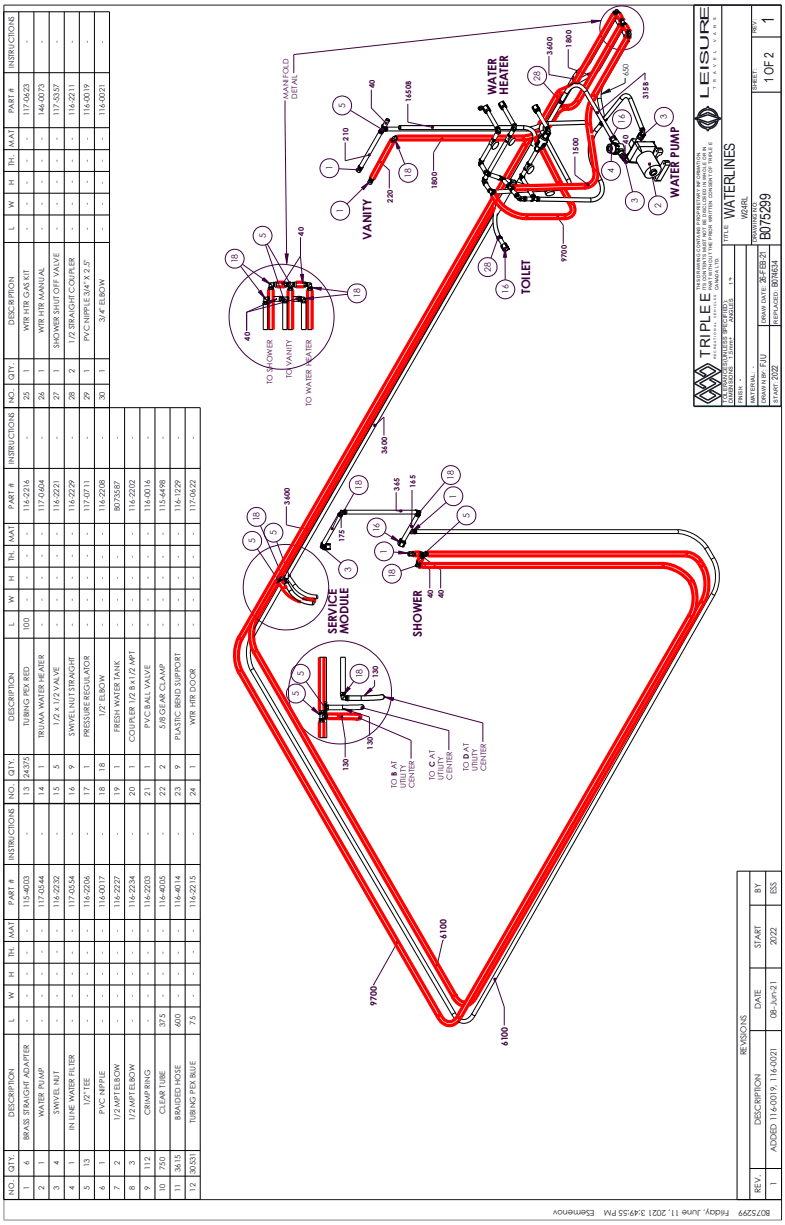

NO.	QTY.	DESCRIPTION	L	W	H	TH.	MAT	PART #	INSTRUCTIONS
1	6	BRASS STRAIGHT ADAPTER	-	-	-	-	-	115-4003	-
2	1	WATER PUMP	-	-	-	-	-	117-0544	-
3	4	SWIVEL NUT	-	-	-	-	-	116-2232	-
4	1	IN LINE WATER FILTER	-	-	-	-	-	117-0554	-
5	13	1/2" TEE	-	-	-	-	-	116-2206	-
6	1	PVC NIPPLE	-	-	-	-	-	116-0017	-
7	2	1/2 MPT ELBOW	-	-	-	-	-	116-2227	-
8	3	1/2 MPT ELBOW	-	-	-	-	-	116-2234	-
9	112	CRIMP RING	-	-	-	-	-	116-2203	-
10	750	CLEAR TUBE	375	-	-	-	-	116-4005	-
11	36.15	BRAIDED HOSE	600	-	-	-	-	116-4014	-
12	30.531	TUBING PEX BLUE	75	-	-	-	-	116-2215	-

NO.	QTY.	DESCRIPTION	L	W	H	TH.	MAT	PART #	INSTRUCTIONS
13	24.375	TUBING PEX RED	100	-	-	-	-	116-2216	-
14	1	TRUMA WATER HEATER	-	-	-	-	-	117-0604	-
15	5	1/2 x 1/2 VALVE	-	-	-	-	-	116-2221	-
16	9	SWIVEL NUT STRAIGHT	-	-	-	-	-	116-2229	-
17	1	PRESSURE REGULATOR	-	-	-	-	-	117-0711	-
18	18	1/2" ELBOW	-	-	-	-	-	116-2208	-
19	1	FRESH WATER TANK	-	-	-	-	-	8073587	-
20	1	COUPLER 1/2 B x 1/2 MPT	-	-	-	-	-	116-2202	-
21	1	PVC BALL VALVE	-	-	-	-	-	116-0016	-
22	2	5/8 GEAR CLAMP	-	-	-	-	-	115-4498	-
23	9	PLASTIC BEND SUPPORT	-	-	-	-	-	116-1229	-
24	1	WTR HTR DOOR	-	-	-	-	-	117-0622	-

NO.	QTY.	DESCRIPTION	L	W	H	TH.	MAT	PART #	INSTRUCTIONS
25	1	WTR HTR GAS KIT	-	-	-	-	-	117-0623	-
26	1	WTR HTR MANUAL	-	-	-	-	-	146-0073	-
27	1	SHOWER SHUT OFF VALVE	-	-	-	-	-	117-5357	-
28	2	1/2 STRAIGHT COUPLER	-	-	-	-	-	116-2211	-
29	1	PVC NIPPLE 3/4" X 2.5"	-	-	-	-	-	116-0019	-
30	1	3/4" ELBOW	-	-	-	-	-	116-0021	-

DRAIN LINE SCHEMATIC

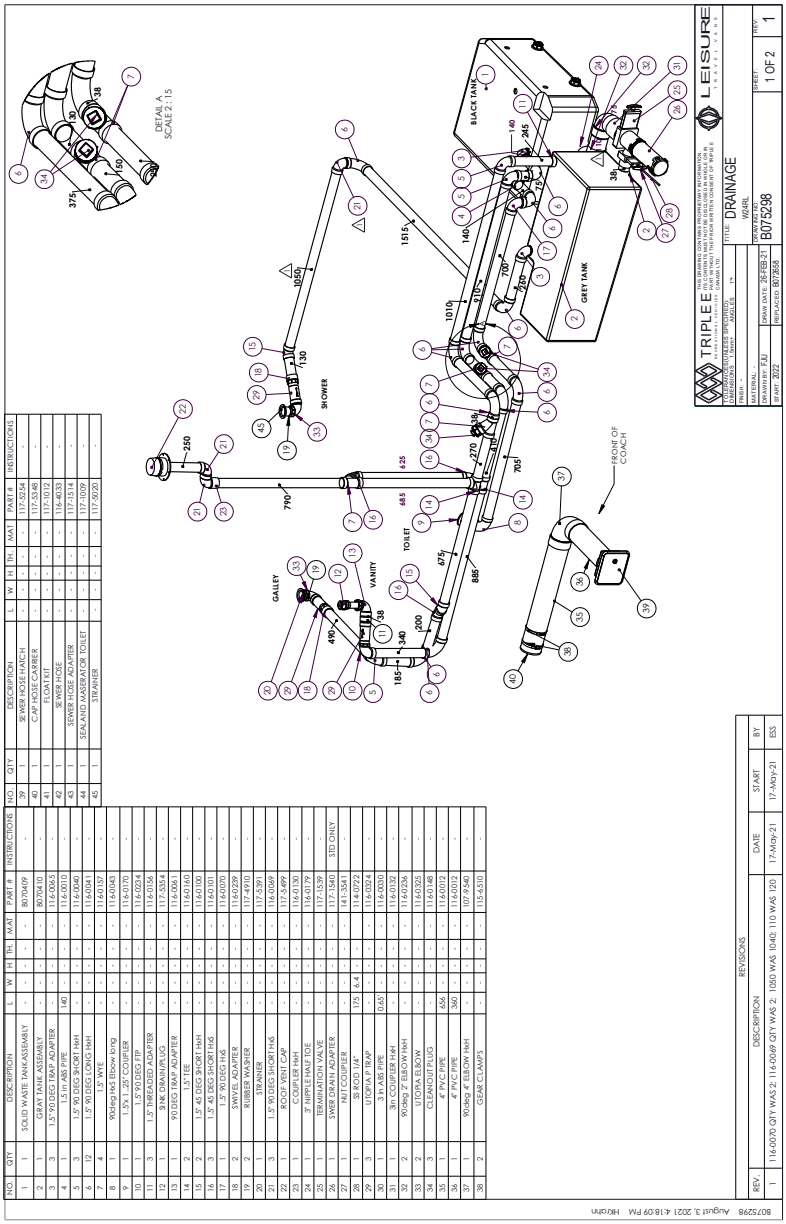

NO.	QTY	DESCRIPTION	L	W	H	THK.	MAT	PART #	INSTRUCTIONS
1	1	SOLID WASTE TANK ASSEMBLY	-	-	-	-	-	807409	-
2	1	GRAY TANK ASSEMBLY	-	-	-	-	-	807410	-
3	3	1.5" 90 DEG TRAP ADAPTER	-	-	-	-	-	116-0065	-
4	1	1.5 in ABS PIPE	140	-	-	-	-	116-0010	-
5	3	1.5" 90 DEG SHORT HxH	-	-	-	-	-	116-0040	-
6	22	1.5" 90 DEG SHORT HxH	-	-	-	-	-	116-0043	-
7	4	1.5" WYE	-	-	-	-	-	116-0137	-
8	1	90deg Hx3 Elbow 6in lg	-	-	-	-	-	116-0043	-
9	1	1.5"x 1 .25" COUPLER	-	-	-	-	-	116-0170	-
10	1	1.5" 90 DEG FIP	-	-	-	-	-	116-0834	-
11	3	1.5" THREADED ADAPTER	-	-	-	-	-	116-0156	-
12	1	SINK DRAIN PLUG	-	-	-	-	-	117-0354	-
13	1	90 DEG TRAP ADAPTER	-	-	-	-	-	116-0061	-
14	2	1.5" TEE HxHxH	-	-	-	-	-	116-0160	-
15	2	1.5" 45 DEG SHORT HxH	-	-	-	-	-	116-0100	-
16	3	1.5" 45 DEG SHORT HxS	-	-	-	-	-	116-0101	-
17	1	1.5" 90 DEG HxS	-	-	-	-	-	116-0070	-
18	2	SWIVEL ADAPTER	-	-	-	-	-	116-0259	-
19	2	RUBBER WASHER	-	-	-	-	-	117-4910	-
20	1	STRAINER	-	-	-	-	-	117-5391	-
21	3	1.5" 90 DEG SHORT HxS	-	-	-	-	-	116-0498	-
22	1	90 DEG SHORT CLEAR	-	-	-	-	-	116-0499	-
23	1	COUPLER HxH	-	-	-	-	-	116-0130	-
24	1	3" NIPPLE HALF TOE	-	-	-	-	-	116-0179	-
25	1	TERMINATION VALVE	-	-	-	-	-	117-1539	-
26	1	SWER DRAIN ADAPTER	-	-	-	-	-	117-1540	STD ONLY
27	1	NUT COUPLER	-	-	-	-	-	141-3341	-
28	3	38 ROD 1/4"	175	4.4	-	-	-	114-0722	-
29	1	1.5 in ABS TRAP	-	-	-	-	-	116-0064	-
30	1	3 in ABS PIPE	10.65	-	-	-	-	116-0031	-
31	1	3in COUPLER HxH	-	-	-	-	-	116-0132	-
32	2	90deg 2" ELBOW HxH	-	-	-	-	-	116-0126	-
33	2	UTOPIA ELBOW	-	-	-	-	-	116-0325	-
34	3	CLEANOUT PLUG	-	-	-	-	-	116-0148	-
35	1	4" PVC PIPE	656	-	-	-	-	116-0012	-
36	1	4" PVC PIPE	360	-	-	-	-	116-0012	-
37	1	90deg 4" ELBOW HxH	-	-	-	-	-	116-0146	-
38	2	GEAR CLAMPS	-	-	-	-	-	115-4310	-
39	1	SEWER HOSE HxHC+1	-	-	-	-	-	117-5234	-
40	1	CAP HOSE CARRIER	-	-	-	-	-	117-5348	-
41	1	CLAMP	-	-	-	-	-	117-1272	-
42	1	SEWER HOSE	-	-	-	-	-	116-4033	-
43	1	SEWER HOSE ADAPTER	-	-	-	-	-	117-1514	-
44	1	SEALAND MASERATOR TOILET	-	-	-	-	-	117-1009	-
45	1	STRAINER	-	-	-	-	-	117-5020	-

REV.	DESCRIPTION	DATE	START	BY
REVISIONS				
1	116-0070 QTY WAS 2; 116-0069 QTY WAS 2; 1050 WAS 1040; 110 WAS 120	17-Mar-21	17-Mar-21	ESS

ENTERTAINMENT

NO.	QTY	PART NO.	DESCRIPTION
1	REF	108-1465	WINEGARD CONNECT 2.0
2	REF	108-0269	HDMI SWITCH 4-IN, 2-OUT
3	REF	108-1487	SONY BLU-RAY PLAYER
4	1	108-0264	HDMI 4' BLU-RAY TO SWITCH
5	1	137-7587	ANTENNA BOOSTER SWITCH
6	REF	108-1498	JBL SOUNDBAR
7	1	108-1388	COAX 90 ADAPTER
8	1	108-0252	HDMI 90 ADAPTER LEFT
9	1	108-0264	HDMI 4' LOUNGE TV
10	2	108-0273	10' THIN OPTICAL CABLE

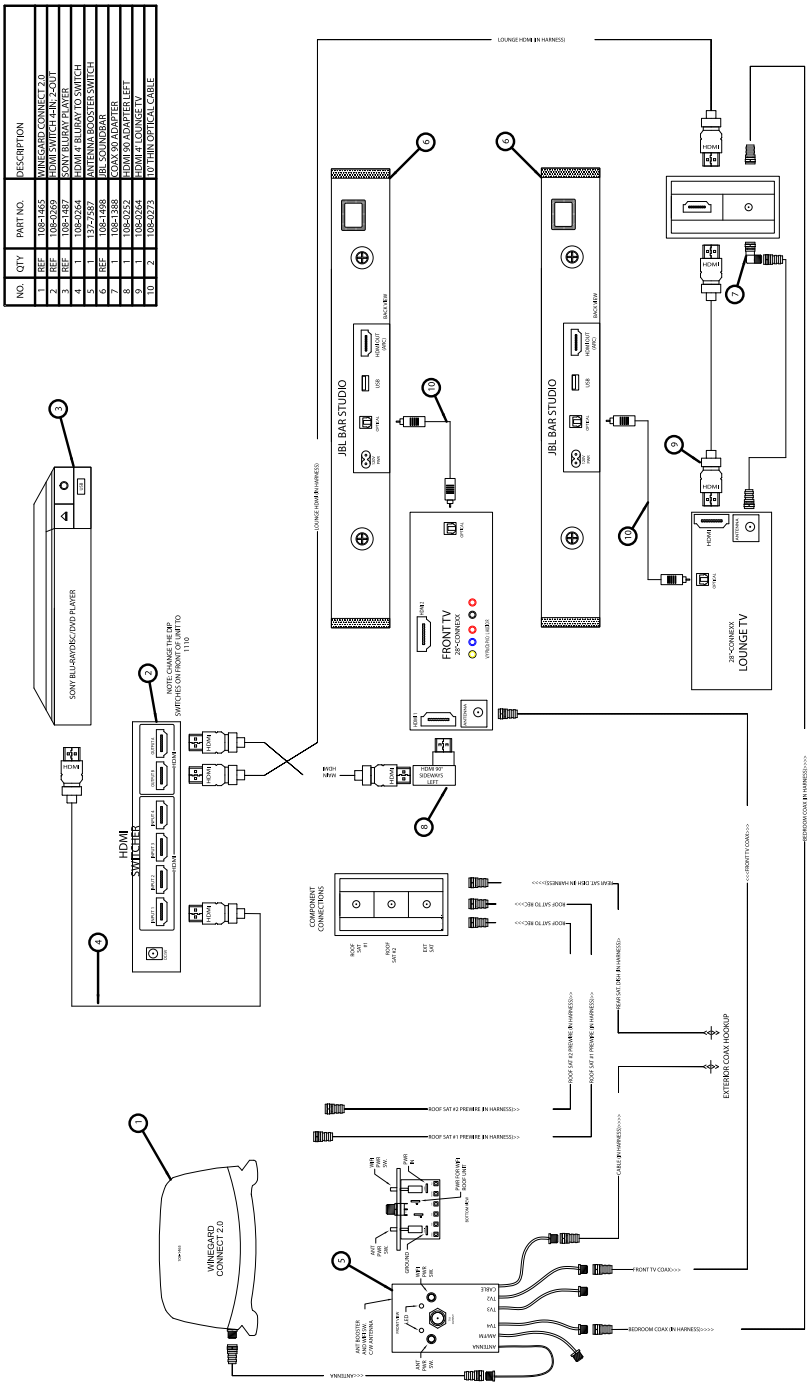

SATELLITE PRE-WIRE

If your coach did not come with the optional satellite dish, it will be pre-wired for installation at a later date if you so choose. Location of the prewire will vary by floorplan.

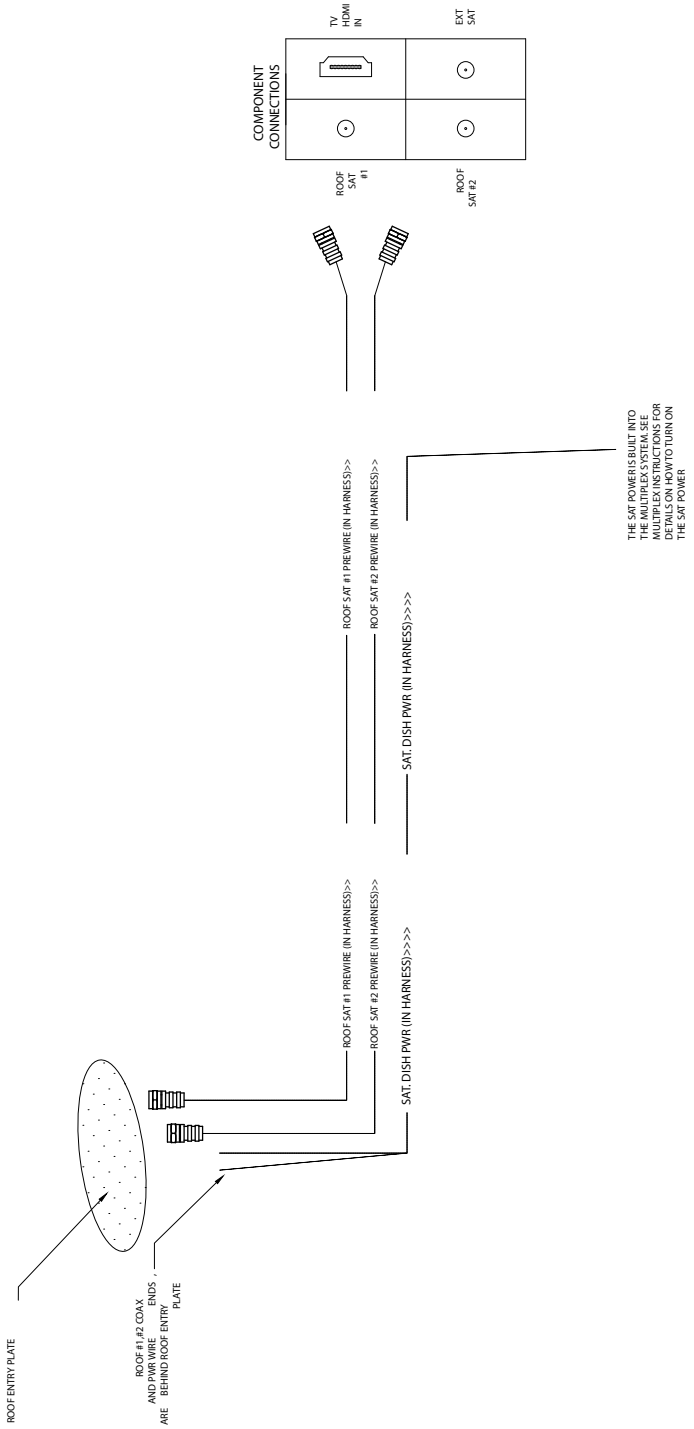

NOTES

NOTES

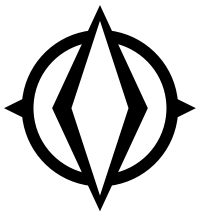

LEISURE

TRAVEL VANS

LTV Roadside Assistance

4287 Beltline Road, Box #198
Addison, TX 75001

for EMERGENCY ROADSIDE CALL
1•877•219•3831





Triple E Recreational Vehicles and Leisure Travel Vans are brands and trademarks of Triple E Canada Ltd.

301 Roblin Blvd., Box 1230 Winkler, MB Canada R6W 4C4
Telephone: 204-325-4361 Fax: 204-325-5241

US Address: P.O. Box 68 Walhalla, ND 58282

www.tripleerv.com • info@tripleerv.com • www.leisurevans.com • general@leisurevans.com

Product improvement is a continuing process at Triple E Recreational Vehicles.
We reserve the right to change specifications, operating instructions, standards and options on any products without prior notice. The information, illustrations and pictures within this document are current at the time of printing.

Copyright, Triple E Canada Ltd.
P/N 146-4607-OCT21

Printed in Canada